## Q-band Linear to Circular Polarizer, 33-50 GHz, Switchable

**SAS-22-250-M1-599** is a Q band, linear to circular manual switchable polarizer that operates from 33 GHz to 50 GHz. The polarizer features a 5-position manual lever for switching between output polarization modes such as linear to left or right hand circular polarization depending on the input signal and linear to linear signals. The polarizer offers a typical insertion loss of 0.6 dB, typical axial ratio of 1.2, and a typical return loss of 20 dB. The polarizer is often combined with Eravant's rectangular to circular waveguide transition (<u>SWT-22250-SB-599</u>) and (<u>SAC-2309-250-S2</u>) for various system applications.

### Electrical Specifications:

Parameter	Minimum	Typical	Maximum
Frequency Range	33 GHz		50 GHz
Insertion Loss		0.6 dB	
Axial Ratio		1.2	
Return Loss		20 dB —	
Specification Temperature		+25°C	
Operating Temperature	-40°C		-85°C

## **Mechanical Specifications:**

Item	Specification		
RF Ports	Ø0.250" Circular Waveguide with 599/U-M Compatible Flange		
Waveguide Material and Finish	Gold Plated Aluminum		
Casing Material and Finish	Black Anodized Aluminum		
Weight	7.2 Oz		
Outline	AS-MQF-250-599		

## ECCN

EAR99

#### FEATURES

- Lever Operated Polarization Mode Selector
- Full Band Coverage
- Compact Size
- Good Axial Ratio


### APPLICATIONS

- Antenna Ranges
- Waveguide Polarization Selection
- Communication Systems


#### SUPPLEMENTAL DETAILS



# ERA\ANT

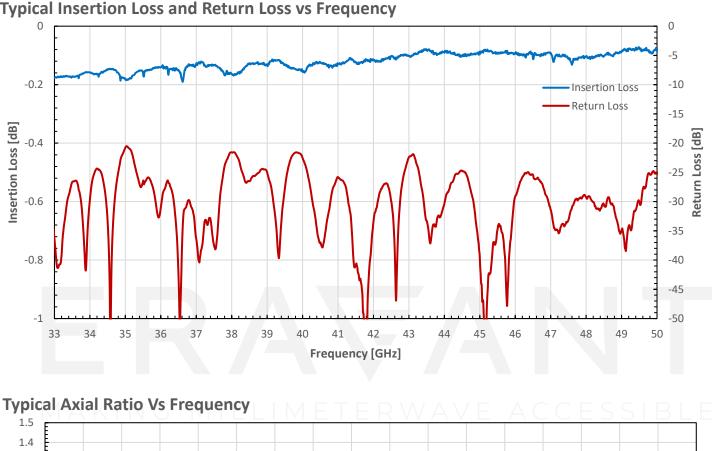

**Typical Insertion Loss and Return Loss vs Frequency** 

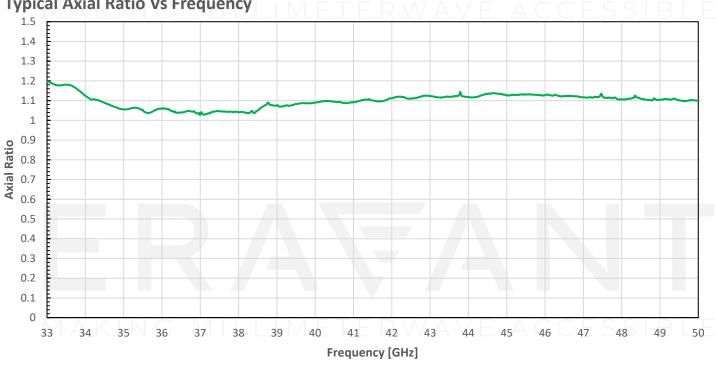


# ERAWANT

# ERA₩ANT

## **Mechanical Outline:**

Unless otherwise specified, all dimensions are in inches [millimeters])

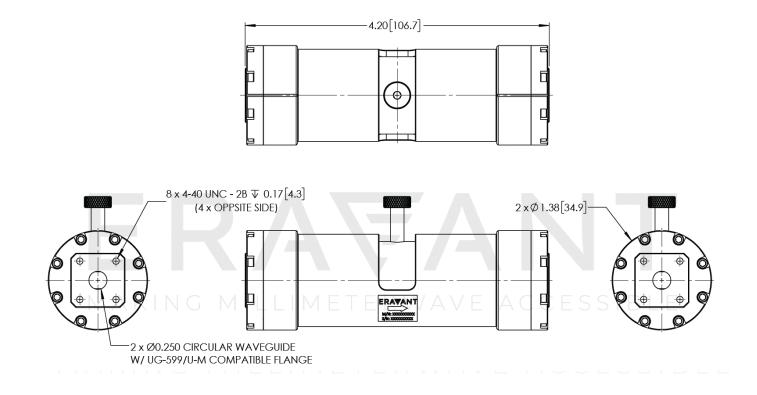

#### NOTE:

- Test data is collected from a sample lot. Actual data may vary slightly from unit to unit. All testing is performed under +25 °C room temperature.
- Eravant reserves the right to change the information presented without notice.

#### CAUTION:


• Any foreign objects in the antenna will cause performance degradation and possible device damage.

# MAKING MILLIMETERWAVE ACCESSIBLE

# ERA\ANT

## Polarizer Mode Configuration Notes and Diagram:

- The polarizer's product label indicates the direction of the input signal.
- Diagram and table for each lever position is provided below. As indicated in the table, certain positions are more optimal that others for transmitting linear signals in regard to insertion loss and return loss.
- To obtain a Left-Handed Circular Polarized (LHCP) signal at the output port, set the lever at the +45° position while feeding a linear vertical signal at the input port. Similarly, LHCP can be obtained by setting the lever at the -45° position while feeding a linear horizontal signal.

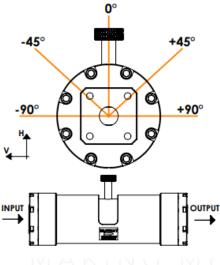

POSITION	INPUT	OUTPUT	
TOSITION	-		
-90°	LINEAR H SIGNAL	LINEAR H SIGNAL (OPTIMAL)	
	LINEAR V SIGNAL	LINEAR V SIGNAL	
-45°	LINEAR H SIGNAL	LHCP	
	LINEAR V SIGNAL	RHCP	
0°	LINEAR H SIGNAL	LINEAR H SIGNAL	
	LINEAR V SIGNAL	LINEAR V SIGNAL (OPTIMAL)	
+45°	LINEAR H SIGNAL	RHCP	
	LINEAR V SIGNAL	LHCP	
+90°	LINEAR H SIGNAL	LINEAR H SIGNAL (OPTIMAL)	
	LINEAR V SIGNAL	LINEAR V SIGNAL	

AKINU MILLIMETERWAVE AUGESTDLE

# ERAFANT MAKING MILLIMETER WAVE ACCESSIBLE