# Full Waveguide Band, E-Band Noise Source

**STZ-12-01** is a full E-Band noise source that delivers a 15 dB nominal ENR with exceptional flatness across the frequency range of 60 to 90 GHz. The noise source can work in either CW or pulse AM mode by applying a TTL triggering signal via a female SMA connector. This feature can also be used in automatic test systems to remotely turn the noise source on and off. In addition, a toggle switch (power/triggering inversion switch) is provided to turn the noise source on and off manually. A Calibration Certificate for ENR values will be included.



# **Electrical Specifications:**

Minimum	Typical	Maximum
60 GHz		90 GHz
	15 dB	
	± 1.5 dB	
	0.01 dB/°C	
	0.05 dB/day	
	TTL	
	1.0 kHz	
+18 V <sub>DC</sub>		+30 V <sub>DC</sub>
50 mA		75 mA
	+25°C	
0 °C		+50 °C
	60 GHz +18 V <sub>DC</sub> 50 mA	60 GHz 15 dB   15 dB ± 1.5 dB   0.01 dB/°C 0.01 dB/°C   0.05 dB/day TTL   1.0 kHz 1.0 kHz   +18 Vpc 50 mA   +25°C

# **Mechanical Specifications:**

Item	Specification	
RF Output Port	WR-12 Waveguide with UG-387/U Flange	
Bias Port Connector Type	BNC (F)	
AM Modulation Connector Type	SMA (F)	
Waveguide Flange	Brass	
Waveguide Flange Finish	Silver Plated	
Cover Material	Aluminum	
Cover Finish	Black Paint	
Weight	8.9 Oz	
Size	2.36" (L) x 1.97" (Ø)	
Outline	TZ-OE	

ECCN EAR99

### **FEATURES**

- Full Waveguide Band Operation
- TTL or Manual On and Off Switches
- CW or Pulsed AM Operation Modes
- Precision Calibrated and Flat ENR

# **APPLICATIONS**

- Test Labs
- Instrumentations
- Radiometric Systems

## SUPPLEMENTAL DETAILS




www.eravant.com | 424-757-0168 | support@eravant.com Copyright © 2023 by Eravant

1/3


# STZ-12-01

# ERA\ANT

**Typical ENR vs. Frequency** 

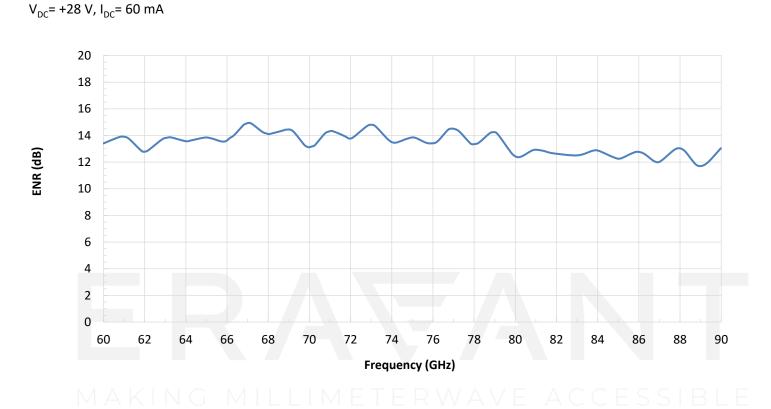

Mechanical Outline: (Unless otherwise specified, all dimensions are in inches [millimeters])

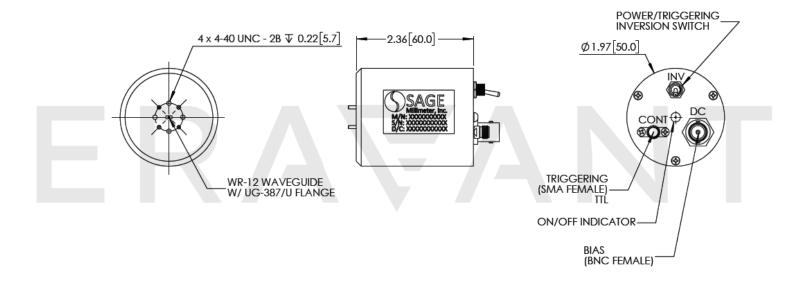

# ERA\ANT

# NOTE:

- On condition that test data is provided it is collected from a sample lot. Actual data may vary slightly from unit to unit. All testing is performed under +25 °C room temperature.
- The **Triggering Port** (female SMA connector) of the noise source is provided to turn the noise source on the off via a TTL control signal any time the **Bias** is applied. The switching frequency is limited to 1 kHz.
- The **Power/Triggering Inversion Switch** of the noise is provided to manually turn the noise source on and off any time the **Bias** is applied. When the switch is in the "ON" position, the LED light will be illuminated.
- Eravant reserves the right to change the information presented without notice.

### CAUTION:

- Exceeding absolute maximum rating will damage the device.
- If a waveguide is present, any foreign objects in the waveguide will cause performance degradation and may damage or destroy the unit.
- For 1.35 mm, 1.85 mm, 2.4 mm, 2.92 mm, and SMA connectors proper torque should be applied: 8.0 ± 0.15 inch-pounds (0.90 ± 0.02 Nm). Torque wrench model <u>SCH-08008-S1</u> is highly recommended.

# ERAFANT MAKING MILLIMETERWAVE ACCESSIBLE

# ERAFANT MAKING MILLIMETERWAVE ACCESSIBLE