

SWC-191F-E1-WR and SWC-191M-E1-WR

U-Band Waveguide to Coax Panel Mount Adapter, End Launch

SWC-191F-E1-WR and SWC-191M-E1-WR are end launch (180°) U-Band waveguide to coax panel mount adapters that cover the frequency range of 40 to 60 GHz. They are designed and manufactured for panel mount instrumentation applications and allow for an efficient transition between the rectangular waveguide and 1 mm coax connector. These adapters are also specially designed to be weather resistant.



Electrical Specifications:

Parameter	Minimum	Typical	Maximum
Frequency Range	40 GHz		60 GHz
Insertion Loss*		0.6 dB	0.9 dB
Return Loss	13 dB	15 dB	
Power Handling			40 W (CW)
Specification Temperature		+25°C	
Operating Temperature	-40°C		+85°C

*Insertion loss is tested back-to-back with a male and female adapter; the result is divided by 2.

Mechanical Specifications:

Item	Specification
Waveguide	WR-19 with UG-383/U-M Anti-Cocking Flange
Coaxial	1.00 mm Female for Model Number: SWC-191F-E1-WR
Coaxial	1.00 mm Male for Model Number: SWC-191M-E1-WR
Body Material	Aluminum
Flange Material	Brass
Finish	Gold Plated
Weight	3.8 Oz
Outline	WC-U1E-A-WR

ECCN

EAR99

FEATURES

- Full Waveguide Band Coverage
- Lower Insertion Loss and VSWR
- Instrumentation Grade
- DC Short Circuit
- Weather Resistant

APPLICATIONS


- Test Lab
- Instrumentations
- Sub-assemblies

SUPPLEMENTAL DETAILS

SWC-191F-E1-WR and SWC-191M-E1-WR

Mechanical Outline:

Unless otherwise specified, all dimensions are in inches [millimeters]

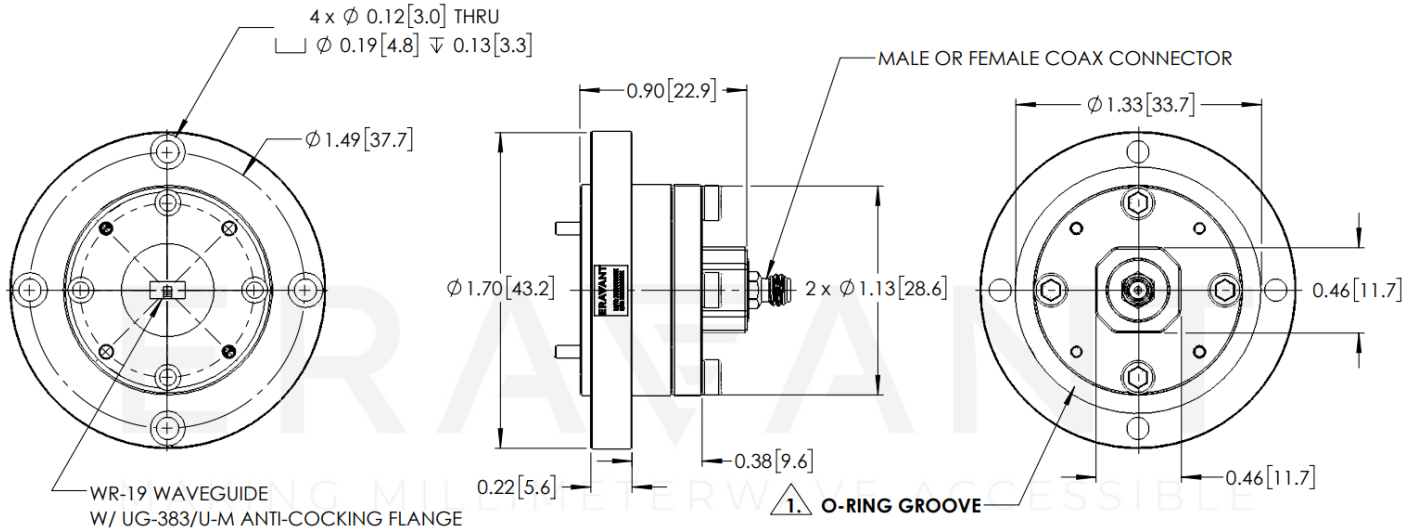

1. RECOMMENDED O-RING SIZE:

Dash #: 122
 CS, Nominal: 3/32"
 ID, Nominal: 1-1/8"
 OD, Nominal: 1-5/16"


NOTE:

- On condition that test data is provided it is collected from a sample lot. Actual data may vary slightly from unit to unit. All testing is performed under +25 °C room temperature.
- On condition that simulated test data is provided, actual measured data may slightly vary.
- Eravant reserves the right to change the information presented without notice.

CAUTION:

- Any foreign objects in the waveguide will cause performance degradation and may damage the adapter.
- Proper torque should be applied: 4.0 ± 0.15 inch-pounds (0.45 ± 0.02 Nm). Torque wrench model SCH-06004-S1 is highly recommended.

Typical Performance vs. Frequency

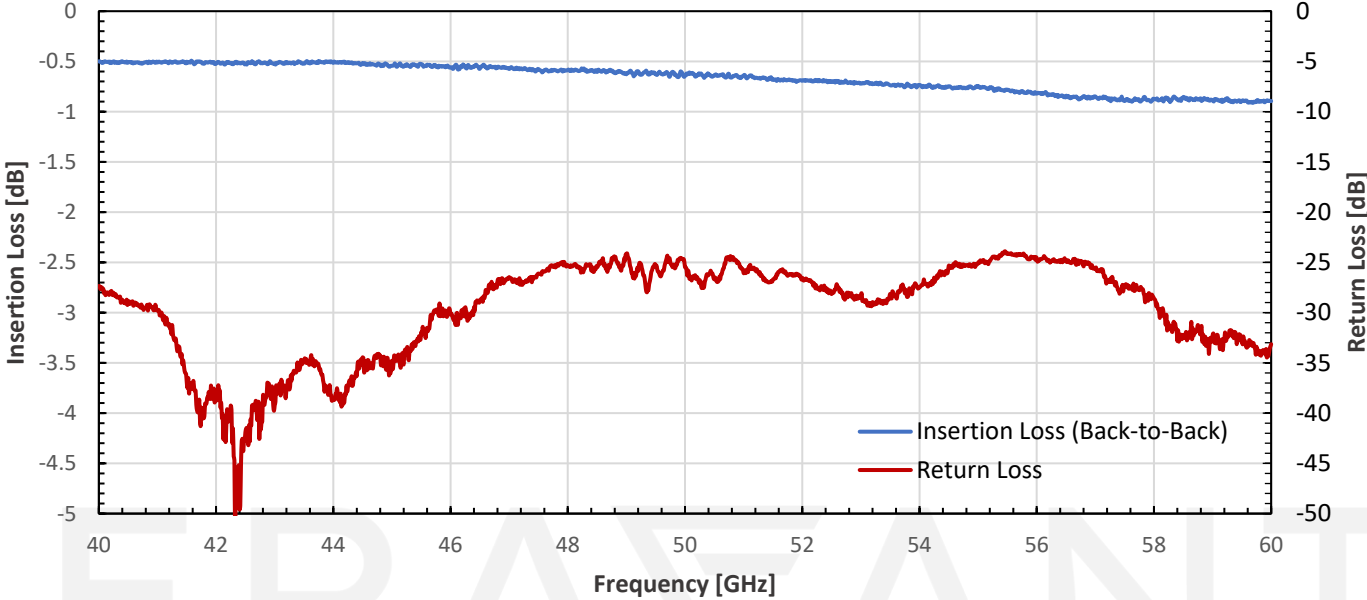

ERAVANT
MAKING MILLIMETERWAVE ACCESSIBLE

ERAVANT
MAKING MILLIMETERWAVE ACCESSIBLE